

**Continuous Ink Supply System
for
CANON PIXMA IP4200**

Installation Instruction

For DP Prefilled Version

With Original Chips

This Version of the Continuous Ink Flow System comes with Prefilled Cartridges and Auto Reset Chips. You just need to fill the Reservoir bottles and print! The whole operation is very easy. It's really an effective tool to save your money.

CIS for CANON PIXMA IP4200 Instruction

Thank you for purchasing DP Continuous Ink Supply System. We appreciate your support and will try our best to make your experience with our products a pleasant one. Printing has been a different experience ever since you installed DP Continuous Ink Supply system on your own printer. Just imagining being able to print without regard to the ink level in those expensive little cartridges.

Please take your time installing DP Continuous Ink Supply system. Do not remove your old cartridge until you have the DP CIS system primed and ready to install (to prevent the drying of heads). In addition, make sure you are getting perfect nozzle checks before installing the DP CIS system. The DP CIS system won't be able to work properly if the nozzles are previously clogged.

Most people get a perfect nozzle check the first time after installing the DP Continuous Ink Supply system; others may need to run two or three cleaning cycles or let the printer sit for a while before they get the perfect results.

1. General Guide:

1) Components

A. CIS system	1 set
B. Air filters	5 pcs
C. Support Arm	1 set
D. Refill Kit	5 pcs
E. Instruction CD	1 pc



2) Opening box inspection

a、 Check whether all the accessories are ready.

b、 Check whether there's leakage of CIS System, whether some tubes have been separated from CISS. If there is, please kindly to contact the local dealer.

c、 Check whether there is air space in the tube. If the length of air space is more than 20cm, please clean the printer head for 2 or 3 times before printing.

2. Printer testing:

- 1) Check whether the printer is in normal condition, like mechanical status, lubrication status etc.
- 2) Print testing lines to ensure the printing head is good condition.
- 3) Print pictures to see whether the printing image is ok.

3. Installation Procedures:

1) First step



Put the CIS at the right side of printer
And make sure the tube line does not twist.



Take off the rubbers from ink tank's
Air-hole



Put the Air-filter into the Air-hole


2) Install chips



Carefully remove the original chips
from original cartridges as the picture
shows.



Pay attention when you remove original
chips. Make sure that the chips are not
damaged.

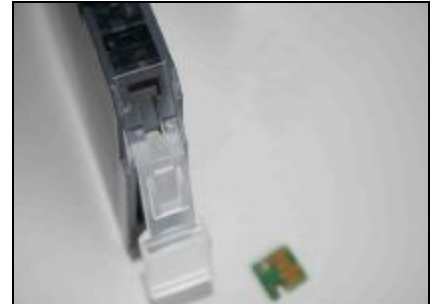

Finished.



Put some glue on the chip position of
CISS cartridge.




Then stick original chips according to
color of cartridges. Please make sure
that the chips number matches
cartridge number.



Do the same for the other cartridges.

3) Install cartridges

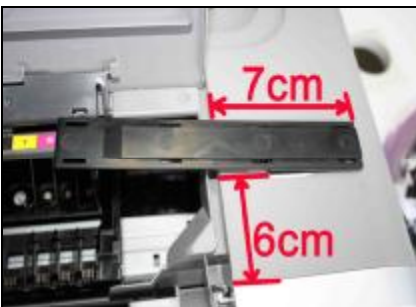

Attache the support arm on the proper
position as the picture shown above.




Then put the CISS cartridges into printer



Please make sure that every cartridge is
well installed according to the color label.

4) Install the tubing.

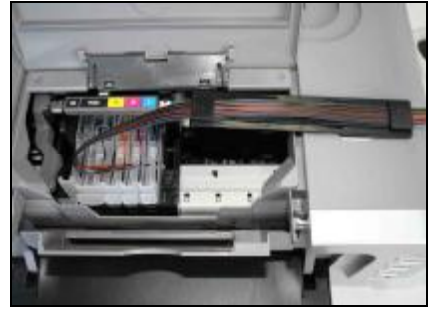

Clip the tube into the support arm as the pictures shown.

5) Adjust tubing



Adjust the tube length and move from Left to right for several times.



Please make sure there will be no block and collision when the cartridges move from one side to the other.



Ensure the length of tube so that the cartridge can thoroughly move to Both sides.



Too long is not OK.



Twist is not OK.



Perfect.


6) Checking the printing head



Enter the Printer Services panel and print a Demo Page.

If it shows any breaks (maybe it caused by air bubbles in the printing head), please clean your printing head. If it still shows little breaks, especially only for one color, it is unnecessary to repeatedly clean printer-head. Just keep the printer unused for about one hour and print a Demo Page again. If it is still abnormal, please kindly contact local dealer.

Canon iP4200 (副本 1) - USB036




墨水用完。
更换墨水盒，然后关闭机盖。更换墨水盒时，确认已打开内盖。

如果打印正在进行并想继续打印，请在墨水盒安装的情况下按“恢复”按钮。然后可以在墨水用完的情况下继续打印。打印完成后请立即更换空墨水盒。如果在墨水用完的情况下继续打印，打印机可能会被损坏。

以下墨水剩余量检测功能失效。
黄色 [8]
以下墨水盒墨水已用完。
黑色 [5]

确定 取消打印

Canon iP4200 (副本 1) - USB036

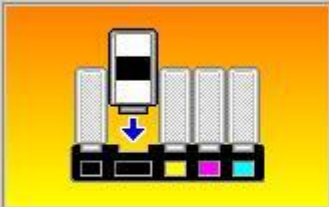

无法正确检测以下墨水的剩余量。
黑色 [5]
更换墨水盒。如果想继续使用墨水盒，请单击“确定”。

确定 取消打印

Canon iP4200 (副本 1) - USB036



安装了用尽过的墨水盒。
在该情况下打印，可能会损坏打印机。
如果想继续打印，请单击“是”。该操作将使剩余墨水量检测功能失效。

是 上一步 取消打印

Canon iP4200 (副本 1) - USB036



对于因使用再填充墨水盒而导致的打印机故障或损坏，Canon 将不承担任何责任。
使用再填充墨水盒被记录。
继续打印吗？

是 上一步 取消打印



Pls pay attention to the ink level .If it is less than 1cm of ink tank, then use refill kits to refill at once.



Take off the ink tank's rubber slowly



Refill ink according to the color carefully
And clean the ink tanks after refilling.

Please keep the printer and the reservoir at the same horizontal line during the process of refilling ink

5. Attention for Maintenance:

Take out the CISS including the inner cartridges and other components. Then remove support arm from printer, and re-install original cartridges. Please inquire local dealer before sending to maintenance.

6. Notice:

1. Please don't take out cartridge at random after installing the CIS system. Keep the reservoir bottles on the same level with the printer.
2. Try to keep at least 1/2 inch of ink in the bottles.
3. Don't place the Reservoir Bottles too much higher or lower than the printer.
4. Suggested using in a dry place between 15 and 35 degree. Avoid exposure to direct sunlight.
5. Don't reverse or lean the continuous ink supply systems during shipping. Please make sure all the ink filling holes and ventilation holes are closed tightly during transportation. Otherwise, the ink may leak.
6. Don't sway the cartridge frequently. It may cause ink leakage.
7. Don't pull out the connector of cartridge and don't tear off adhesive tape at the bottom of cartridge.

7. Warning:

1. Not drinkable; keep it out reach of children.
2. Avoid exposure to direct sunshine and don't keep it in high or freezing temperature.
3. Avoid collision and fallen down.