


Continuous Ink Supply System Installation Instruction

For XP series printer, XP600 (T2621,T2631,T2632,T2633,T2634)—Europe market printer for example



Printer testing:

- 1) Check whether the printer is normal condition, like mechanical status, lubrication status etc.
- 2) Print testing lines to ensure the printing head is good condition.
- 3) Print pictures to see whether the printing image is ok.
- 4) Use the same ink incase cause block printhead problem.

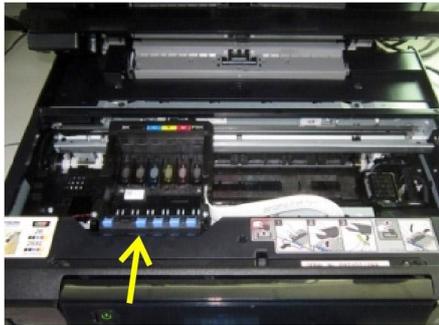

1. Turn on the printer. Perform “change cartridge” operation. The cartridge will move to left as picture show




2. Remove the original cartridge cover.



3. Install cartridge into the printer. The cartridge must be install correctly.





4. This is a hose support arm special for xp series ciiss.

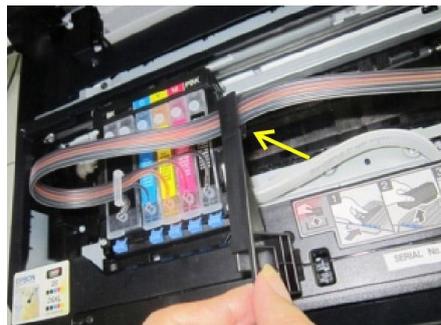

5. clip the hose in the special support arm as picture show




6. Insert the button of support arm on to the place of arrow

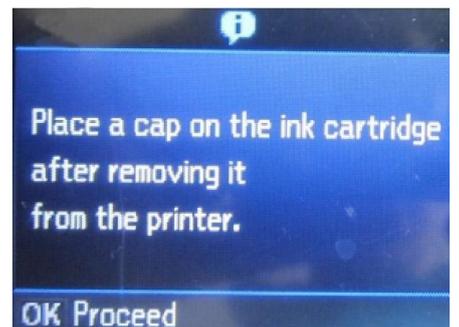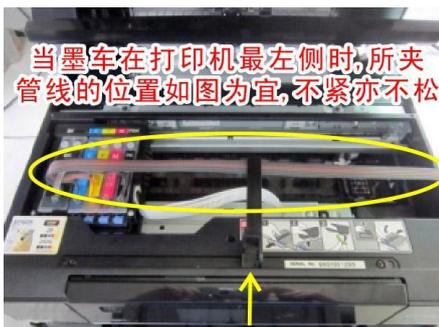

7. Adjust the tube as the picture show. The tube will not too tight and lax.



10 then the printer show as above, Press "OK"

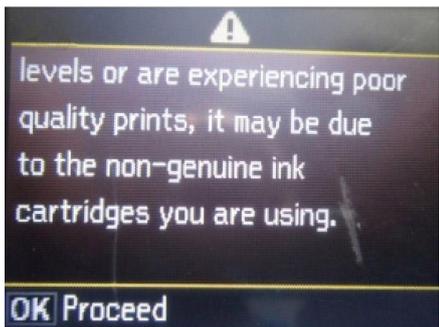


13. when printer show this information , Press "OK"




Printer operation head cleaning

8. put the tank on the right of printer, Open air plug and insert air filter

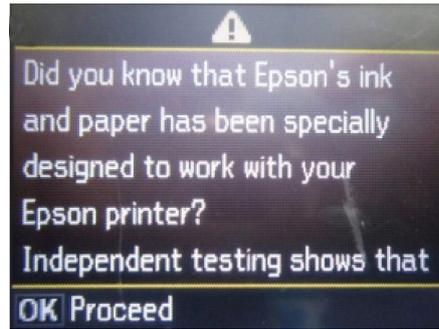

11. when printer show this information , Press "OK"

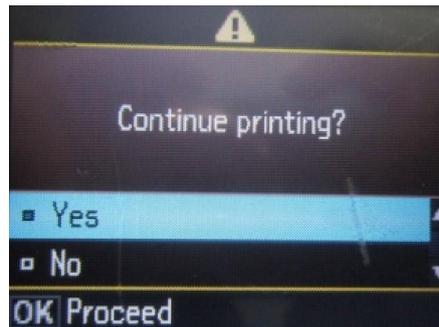


14. when printer show this information , Press "OK"



16. fix u support arm, and hold the hose a picture show. Then close the cover of printer. And the printer is ready to printer.

9. the printer will show information as above. Press "OK"

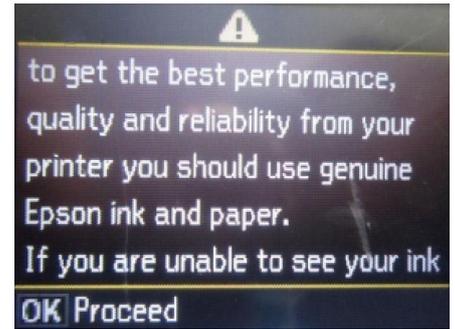


12. when printer show this information , Press "OK"



15. Printer operation head cleaning

How are reset chip

If the printer show one or more cartridge ink out. Follow the below step to reset chip.

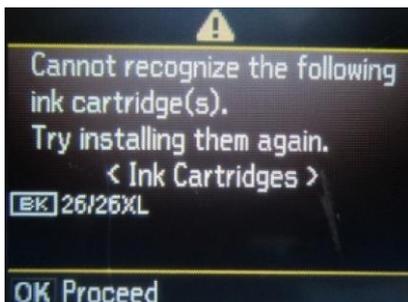

1. for example, If the printer show



2. the printer show information as



3. open the cover, take out support


can't recognize black cartridge, above.
press "ok"



4. the printer will show this.



5. press the blue plastic to jump black cartridge.

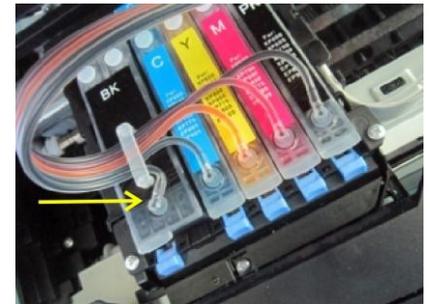

6. then press black cartridge and install it again.




7. Install support arm again as picture show.




8. the printer will show information as above. Press "OK"



9. when printer show this information, Press "OK"

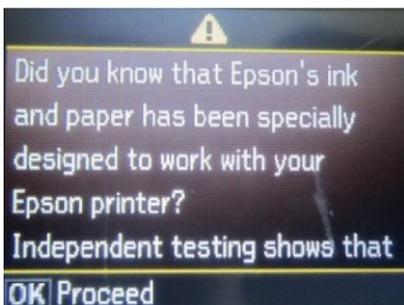


10. when printer show this information, Press "OK"

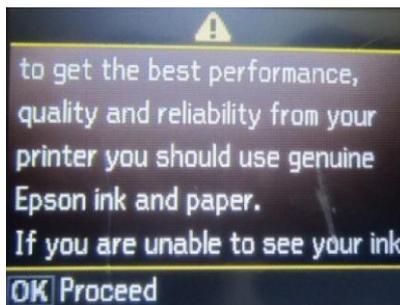

11. when printer show this information, Press "OK"



12. when printer show this information, Press "OK"

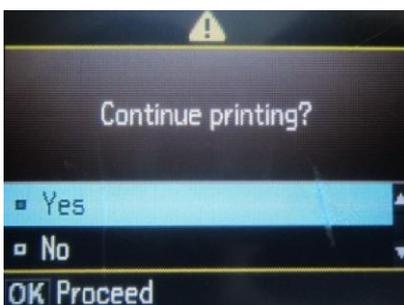

13. when printer show this information, Press "OK"
Repeat step 1- 14 to reset other cartridge.