



FORMATION INFORMATIQUE BUREAUTIQUE ET MEDICALE

adresse postale : 18, Le Village 88490 La Petite Fosse

Tél. : 03 29 51 66 80 Télécopie : 03 29 51 66 80 Mobile : 06 79 27 33 87

COMMENT FAIRE MARCHÉ ARRIÈRE POUR LE FIRMWARE EPSON XP-

300/302/303/305/306/310/312/313/315/400/401/410/412/4
13/415/510/600/601/605/610/615: 

Turn off the printer.

Press and hold **STOP** + **LEFT ARROW** + **HOME** + **ON** buttons at the same time within one minute after printer is turned off.

Printer LCD will display "**FW Update Mode**".

Update devices list and select firmware then click update.

When update is completed confirm that "**FINISHED**" text and firmware information is displayed on the screen.

Press **OK** button to turn off the printer.

STOP - red triangle in the circle.

LEFT ARROW - white arrow on the left side of the OK button.

HOME - button on the left side of the LCD

TOPCARTOUCH