


User Guide for 7 Pins Separate Chip

1. Character of Separate Chip (as picture)

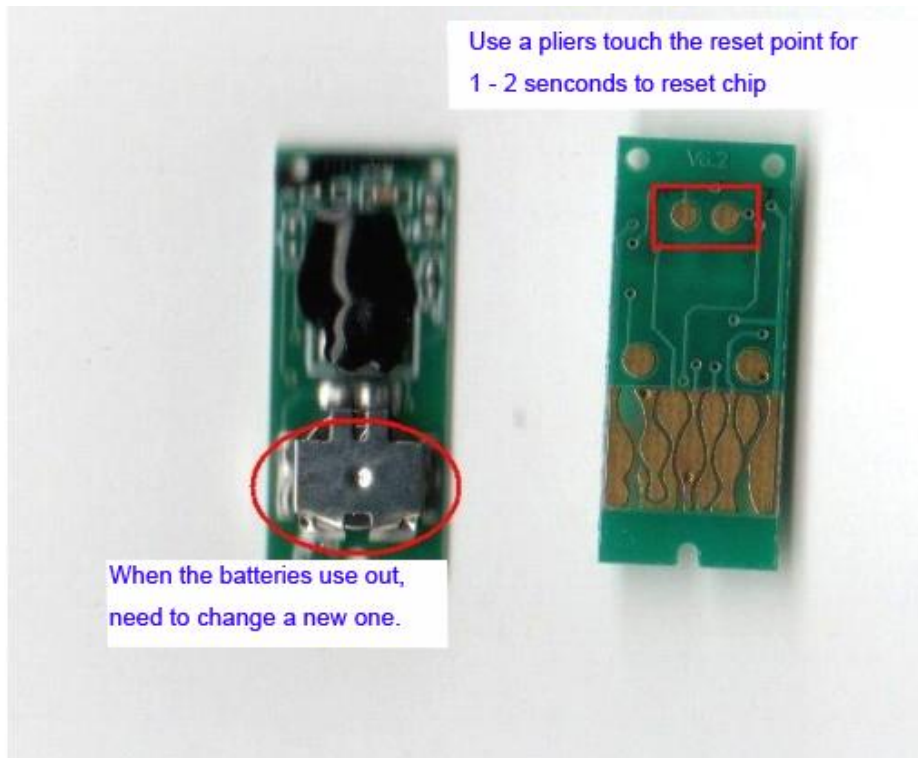

2. Separate Chip Cartridge Model :

T25/TX125 (T1351/T1332-T1334)

T22/TX120 (T1321/T1332-T1334)

TX320/TX420W (T1331/1381-T1334)

TX560WD/TX620FWD (T1401-T0404)

NX420/127/320/323 (T1241-T1244)

NX125/127/420/625 (T1251-T1254)

S22/SX420/SX425 (T1281-T1284)

BX305F/320FW/SX420W/SX620FW (T1291-T1294)

BX320FW/SX620FW/BX525WD (T1301-T1304)

TX525FW (T1381 +T1402-T1404)

R2000(T1590,T1591,T1592,T1593,T1594,T1597,T1598,T1599)

R3000(T1571,T1572,T1573,T1574,T1575,T1576,T1577,T1578,T1579)

3.How to Reset:

When the cartridge out of ink, Remove the the cartridge from the printer. Use a wire pliers touch the two reset pins for 1 – 2 seconds(as picture above), Then the ink level can be come full again.

4. Need to change batteries :

There is a fastener batteries in the back of chips, when the batteries use out ,batteries can used about **18 months** ,Please remove the chip from the cartridge, change with a new batteries and pay attention to the “+ - “ .