Continuous Ink Supply System for EPSON Stylus 1390/1400/1410

Installation Instruction

For AT Prefilled Version

This Version of the Continuous Ink Flow System comes with Prefilled Cartridges and Auto Reset Chips. You just need to fill the Reservoir bottles and print! The whole operation is very easy. It's really an effective tool to save your money.

CIS for Epson 1390 Instruction

Thank you for purchasing AT Continuous Ink Supply System. We appreciate your support and will try our best to make your experience with our products a pleasant one. Printing has been a different experience ever since you installed AT Continuous Ink Supply system on your own printer. Just imagining being able to print without regard to the ink level in those expensive little cartridges.

Please take your time installing AT Continuous Ink Supply system. Do not remove your old cartridge until you have the AT CIS system primed and ready to install (to prevent the drying of heads). In addition, make sure you are getting perfect nozzle checks before installing the AT CIS system. The AT CIS system won't be able to work properly if the nozzles are previously clogged.

Most people get a perfect nozzle check the first time after installing the AT Continuous Ink Supply system; others may need to run two or three cleaning cycles or let the printer sit for a while before they get the perfect results.

1. General Guide:

1) Components

A. CIS system 1 set
B. Air filters 6 pcs
C. Support Arm 1 set
D. Refill Kit 6 pcs
E. Instruction CD 1 pc







2) Opening box inspection

- a. Check whether all the accessories are ready.
- b. Check whether there's the leakage of the CISS, whether some tubes have been separated from the CISS, whether there are air bubbles in the tube (If there exists more than 20CM air space, please kindly to contact with the local dealer)

2. Printer testing:

- 1) Check whether the printer is in normal condition, like mechanical status, lubrication status etc.
- 2) Print testing lines to ensure the printing head is good condition.
- 3) Print pictures to see whether the printing image is ok.

3. Installation Procedures:

Step 1: Preparation



Put the CISS on the right side of the printer. and place all the tubes at correct position.



Pull out the small rubber plug from the air hole as picture shown above.



Place 6pcs of air filters into air holes,

Step 2: Take out the original cartridges



Press the power button.



Pulling out the power cord.of printer



Move the cartridge-car to right side

Step 3: Remove the carriage cover



Using a screwdriver pulls out the cartridge cover for putting in the new CISS



Take out the original cartridge




Get ready to put in new CISS


Step 4: Install Cartridges



Place original cartridge above CIS Cartridge.

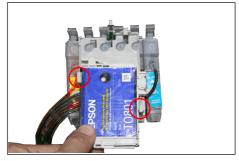

Press cartridge down until it is locked by the circled clips.

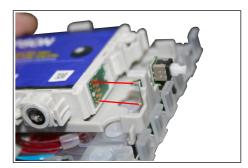


Make sure the top and bottom chip contacts (as picture showing) are well connected. with the two springs on the cover





Push it upside until springs fitted with original cartridges completely.

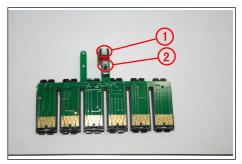

(1) reset button. (2) switch. If the switch is turned to up place, then CISS should work with original cartridge. If the switch is turned to down palce, then CISS Can work without original cartridge.

Step 5: Put the CISS into the printer



Move the cartridge-car to the left side



Put the CIS cartridge through the printer cover Move the cartridge-car back to the original as above picture shown







Install the cartridges according to the color labels and make sure it is well installed.

Step 6: Fix the Support Arm and Tube line




Fit the support arm like the picture shown



Fix the balance arm on the support arm.



Stick the clip on the right side of the printer, make the tube and the printer in the parallel line.

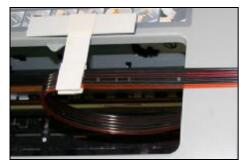

Clip the tube lines.



Move the carriage to the right side and make it keeping straight

Step 7: Adjust Tube line



Adjust the tube length and move the cartridge car. Insure there's plenty length of tube to make the cartridge cart can horoughly move to the left side.



Stimulate the move of the cartridge car. Insure there will no block and when the tubes moving with cartridge car.



Adjustment is finished.



Too long



twist



perfect

Step 8:




Connect the power cord.



Turn on the power and check whether the printer can work well.

Step 9: Check the nozzle







If there is broken lines, then pls clean the printer head.

Enter Checking Nozzle Panel

Broken lines may be caused by air entering the nozzles. If there is still some broken lines after cleaning printer head repeatedly, especially for single color, then you can leave the printer for about 1 hour. Then the broken lines may disappear. If there is still such problem, then pls contact local dealer.


4. Chip Reset



When the ink-lacking light flashes and windows screen shows need to replace new cartridge



Pls press ink-changing button and cartridges will move to ink-changing position.

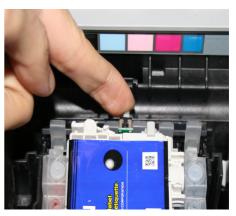

Press chip resetting button.



Press ink-changing button again



Then the cartridge are reset to full level and you can print again.

5. Refill Ink







Please pay attention to the ink level in the reservoirs; if the ink level is below 1CM as the picture shown above, please use refill kits to fill ink into Reservoir bottles. Carefully pull out the rubber plugs from the ink refill holes (There is possibility of ink spattering. Pls be careful.) Refill ink according to the colors. Then re-cap the rubber. (Please keep the printer and the reservoir bottles at the same horizontal line during the process of refilling ink.)

6. Attention for Maintenance:

Take out the CISS including the inner cartridges and other components. Then remove support arm from printer, and re-install original cartridges. Please inquire local dealer before sending to maintenance.

7. Notice:

- 1. Please don't take out cartridge at random after installing the CIS system. Keep the reservoir bottles on the same level with the printer.
- 2. Try to keep at least 1/2 inch of ink in the bottles.
- 3. Don't place the Reservoir Bottles too much higher or lower than the printer.
- 4. Suggested using in a dry place between 15 and 35 degree. Avoid exposure to direct sunlight.
- 5. Don't reverse or lean the continuous ink supply systems during shipping. Please make sure all the ink filling holes and ventilation holes are closed tightly during transportation. Otherwise, the ink may leak.
- 6. Don't sway the cartridge frequently. It may cause ink leakage.
- 7. Don't pull out the connector of cartridge and don't tear off adhesive tape at the bottom of cartridge.

8. Warning:

- 1. Not drinkable; keep it out reach of children.
- 2. Avoid exposure to direct sunshine and don't keep it in high or freezing temperature.
- 3. Avoid collision and fallen down.